



A Safe Fleet Brand

FIRE RESEARCH CORPORATION
26 Southern Blvd., Nesconset, NY 11767
TEL 631.724.8888 FAX 631.360.9727
TOLL FREE 1.800.645.0074
www.fireresearch.com



MODELS 200, 210, 230, 250 RECESSED MOUNT

INSTALLATION INSTRUCTIONS

Refer to the General Lighting manual or lamphead specific sheets for safety and maintenance.

Install Recessed Mount Models 200, 210, 230, 250


1. Measure and mark mounting location for cutout.
2. Cut out mounting hole.
3. Place the light in position to check for fit and mark mounting screw locations.
4. Double check the clearance around and behind the light housing. Recessed lights require a minimum of 3 inch clearance between wall insulation and the light housing.
5. Drill mounting screw holes.

Note: Wires may need to be connected before installing the recessed light.

6. Ensure that approved strain relief for the wiring is installed.

Note: Take steps to prevent dissimilar metal corrosion between the light housing and the screws. Apply a corrosion preventive coating to the screws and use the supplied plastic inserts (not included with the OPA230).

7. Secure the housing with mounting screws.

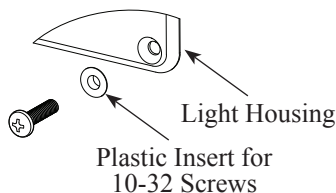

Wiring

12/24 VDC

Connect the BLACK wire to GROUND.


Connect the RED (or WHITE) wire to POWER.

120/240 VAC

Connect the GREEN wire to chassis GROUND.

Connect the WHITE wire to RETURN.

Connect the BLACK wire to POWER.

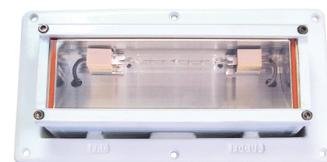

FCA200, FCA210



OPA200, OPA230




OPA250

Install Recessed Mount

| Model <small>*Indicates Evolution LED Model</small> | W | D | H | W ₂ | H ₂ |
|--|---------|-------|-------|----------------|----------------|
| FCA200- | | | | | |
| D15, H30, S30, S50, | 11 | 2 | 5 5/8 | 9 3/4 | 4 1/4 |
| D30, M10, M12 | 17 1/2 | 2 | 5 5/8 | 15 7/8 | 4 1/4 |
| FCA210- | | | | | |
| S72, S75, V12*, V15* | 13 7/8 | 2 | 5 7/8 | 12 1/2 | 4 1/2 |
| OPA200- | | | | | |
| S30, S50, S72, S75 | 11 | 2 | 5 5/8 | 9 3/4 | 4 1/4 |
| M10, M12, M15, R90 | 17 1/2 | 2 | 5 5/8 | 16 1/8 | 4 1/4 |
| OPA230- | | | | | |
| E15, E70, H15, H70 | 10 3/16 | 3 1/4 | 4 3/4 | 8 3/4 | 3 7/8 |
| OPA250- | | | | | |
| S30, S50, S72, S75 | 11 3/16 | 4 1/8 | 7 1/2 | 9 9/16 | 5 3/4 |
| M10, M12, M15, R90 | 16 9/16 | 3 1/4 | 7 5/8 | 15 | 5 3/4 |


Note: W₂ and H₂ will be the cutout dimensions.

FCA200
FCA210

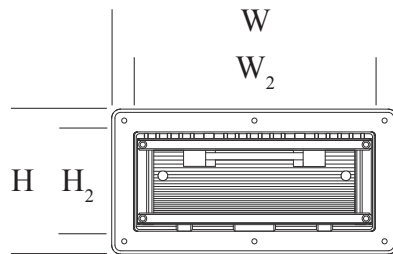

Hardware Recommendations
For 200, 210, mounts:
10-32 SS


OPA200

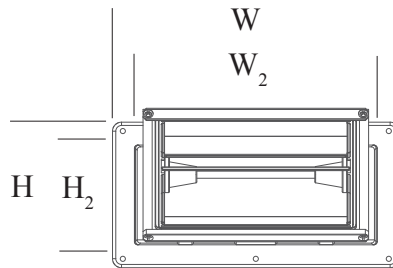

Hardware Recommendations
For 230, mounts:
1/4-20 SS

OPA230

OPA230 is the only recessed light available with HID bulb.

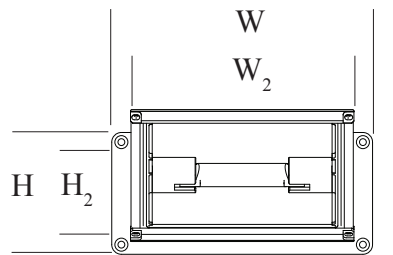

Hardware Recommendations
For 250, mounts:
10-32 SS

OPA250

